



Part 1: Program Esp32 Cam

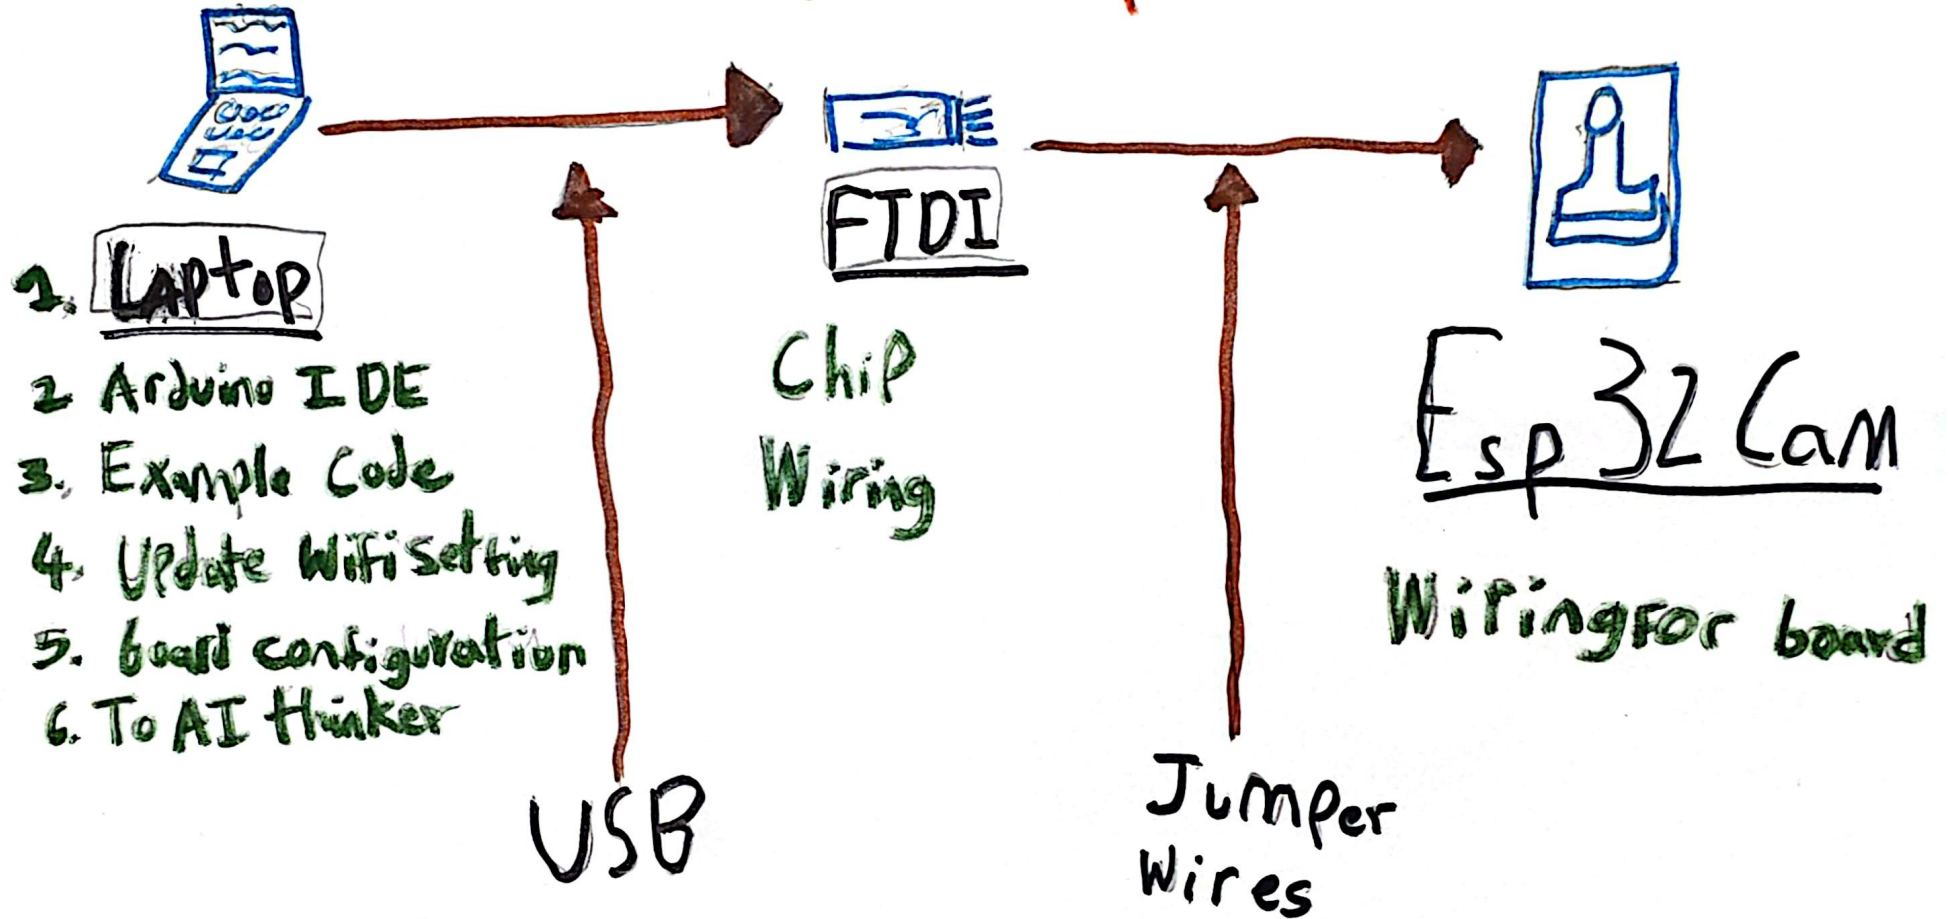

Part 2: Portable Camera Streaming

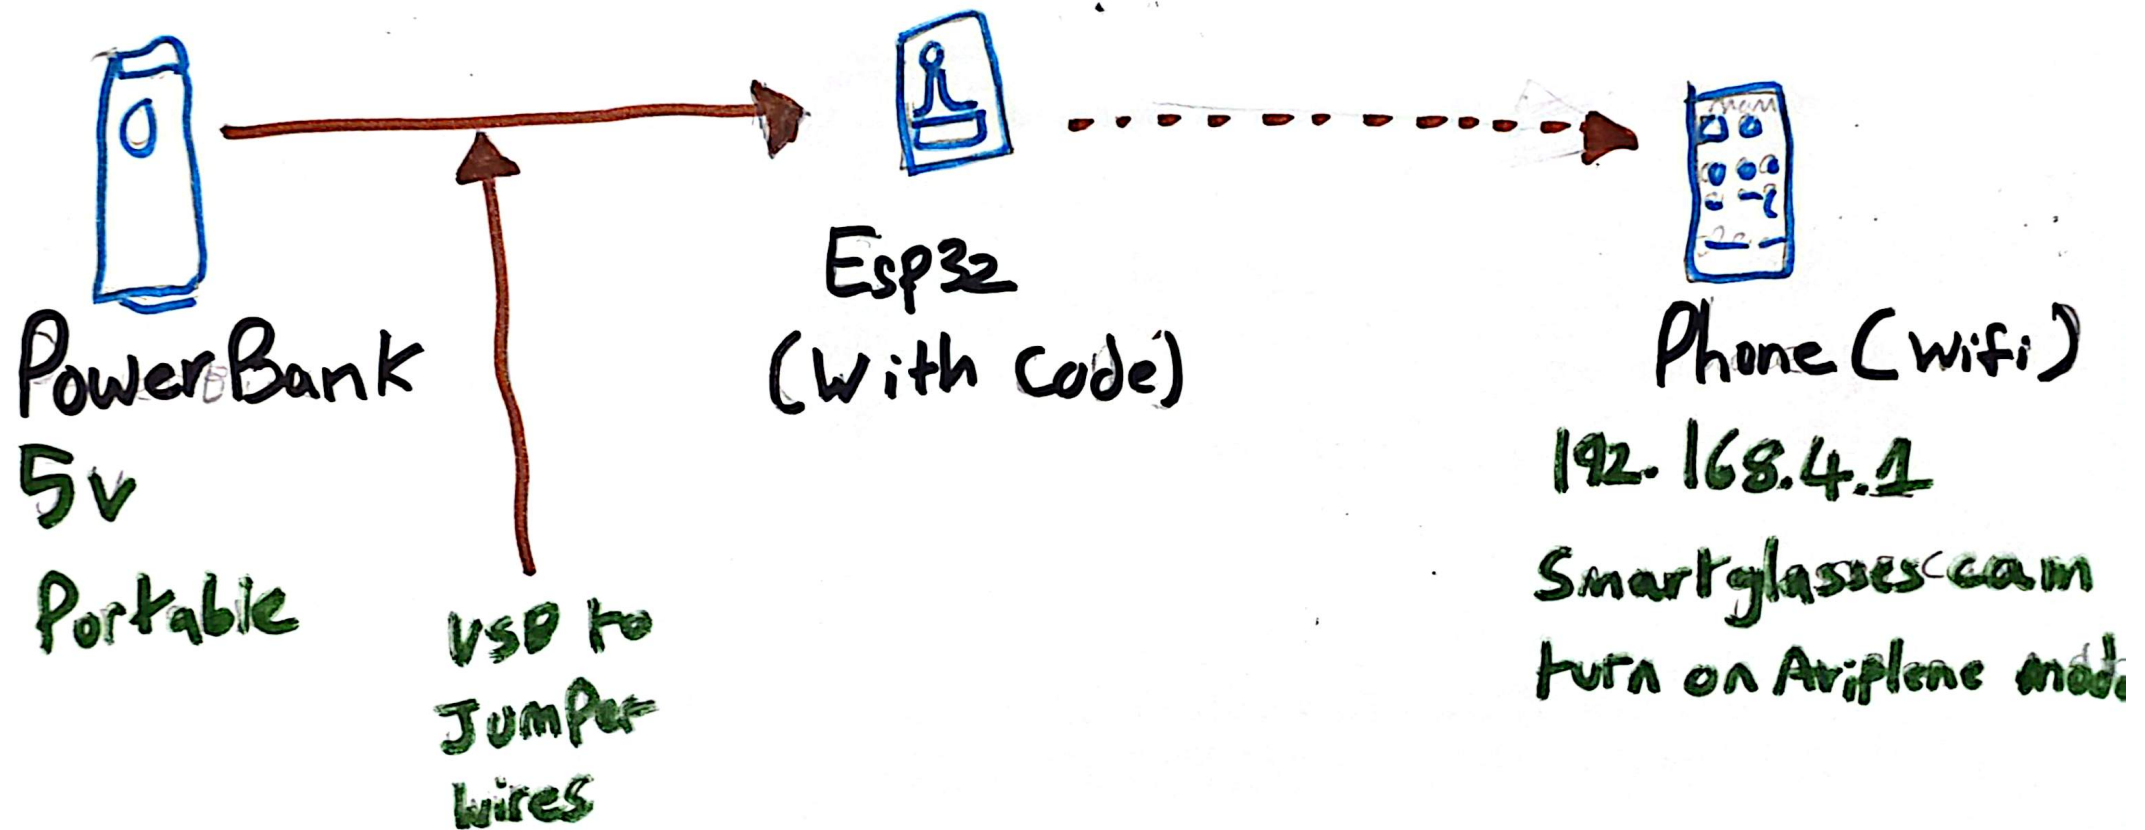




Part 3: Connect to Smart glasses

Steps: Ask Team to turn on glasses!

1. Go to Wifi settings Select "SmartglassesCam"
2. Enter Password "12345678"
3. Select Autoreconnect and Save
4. Turn on Airplane Mode
5. Go to browser and enter "192.168.4.1"
6. Wait for Page to Load. Refresh if Needed
7. Select Resolution "320x240"
8. Led Light- 50%
9. Press "start stream" button
10. ENJOY THE Stream!!

Stay within ten feet of camera.

Part 4: Connect to AT Smart glasses

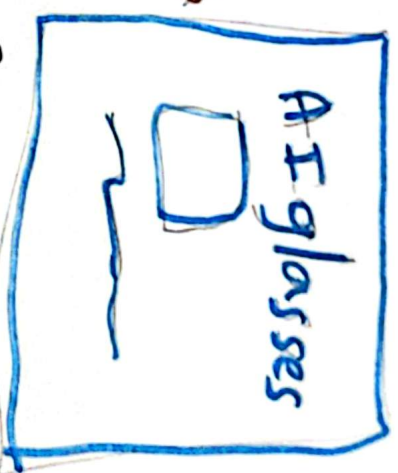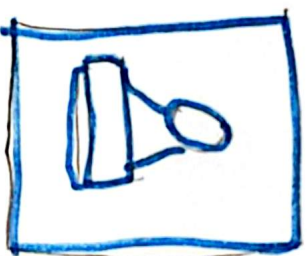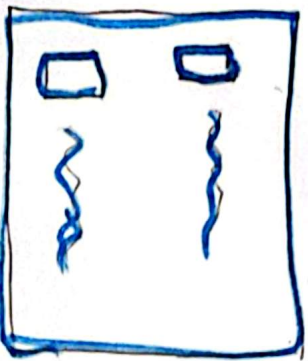

Train AI Model

- Download model
- Unzip model
- Add 'Lib' folder
- Add Libraries

Stream ESP32
(Part 2)

- Connect Smartglasses
(Part 3)

Connect AI

- Connect localhost
open
- Localhost: 8000/
aiglassesdemo.html

Contd Part 4: Connect AI Smartglasses

Steps:

1. Open Command Prompt
2. Type `cd` (path to AI glasses folder)
eg: `C:\Users\apedd\download\Aiglassesmodel`
3. Enter
4. Type `Python -m http.server 8000`
5. Enter
6. Shows message "Serving HTTP on Port 8000"
7. Open browser (Chrome)
8. Enter `192.168.4.1` to start Esp32 stream
(do steps in Part 3)
9. Open another Chrome tab
10. Enter `Localhost:8000/aiglassesdemo.html`
11. Wait for AI stream
12. Show artifacts — Should be same as Trained Artifacts
13. Get Real time data Comparison!!!